

压送式喷枪应用指南

型号	风帽	传输系统		清洗和单工序	底漆, 金属化	蚀洗底漆	底漆和填料
SAGOLA X 4100 	XT01 B	CA	喷嘴和枪针		1.00	1.2	1.4
			进气压力		1.8 - 2.2bar 26 - 32psi	2 - 2.5bar 29 - 36psi	2 - 2.5bar 29 - 36psi
			喷雾压力		0.5 - 1.0bar 7 - 14.5psi	1.0 - 1.5bar 14.5 - 22psi	2 - 2.5bar 29 - 36psi
第1-60页	Super VIT	CA	喷嘴和枪针		1.0	1.2	1.4
			进气压力		1.8 - 2.2bar 26 - 32psi	2 - 2.5bar 29 - 36psi	2 - 2.5bar 29 - 36psi
			喷雾压力		0.5 - 1.0bar 7 - 14.5psi	1.0 - 1.5bar 14.5 - 22psi	2 - 2.5bar 29 - 36psi
	3030	CA	喷嘴和枪针				1.4
			进气压力				2 - 2.5bar 29 - 36psi
			喷雾压力				1.0 - 2.0bar 14.4 - 29psi
	XT03	HVLP	喷嘴和枪针		1.0	1.2	
			进气压力		1.8 - 2.2bar 26 - 32psi	2 - 2.5bar 29 - 36psi	
			喷雾压力		0.5 - 1.0bar 7 - 14.5psi	1.0 - 1.5bar 14.5 - 22psi	
	765	CA	喷嘴和枪针		1.2	1.4	
			进气压力		1.8 - 2.5bar 26 - 36psi	2 - 2.5bar 29 - 36psi	
			喷雾压力		0.5 - 1.0bar 7 - 14.5psi	1.0 - 1.5bar 14.5 - 22psi	
	777	CA	喷嘴和枪针	1 - 1.2			
			进气压力	2 - 2.5bar 29 - 36psi			
			喷雾压力	0.8 - 1.5bar 11.6 - 22psi			